

IV-400 and IV-7226 LANCAM

To Connect to an IV-400 or IV-7226 over the network:

1. Open up Internet Explorer. (Mozilla and Firefox are not supported)
2. Type IP Address of DVR in browser like [Http://192.168.1.80](http://192.168.1.80)
(You can also create a shortcut on your desktop to take you directly to the DVR's address or save the DVR's address as a favorite within IE)
3. When the "challenge screen appears" type in the user name and password and press enter.

That is all that is required. Remember these things:

1. Default user name is admin and default password is 9999
2. You can change the password but not the default user name.
3. You can also access the DVR with a "User" account
4. If you do not see any pictures you might need to load the JAVA desktop available at www.java.com
5. Pictures can also be blocked by AntiVirus software and if you do see pictures you might need to try with antivirus turned off. Also it might be possible to put the IP address into the trusted sites list. Also some routers block the upload of DVR video.
6. There might be a constant clicking as the video refreshes this can be changed within you IE settings.

When creating a Port Forward within a Routers for these units.

1. Only one port is required to be forwarded.
2. Default port set on DVR/LanCam is 80.
3. Ports 1080,2080,3080,4080,5080,6080,7080,8080,9080 can also be used.